



97	97	DN MAIN	RHJR	WISDOM	SR	-
99	99	UP MAIN	LHJR	WISDOM	AR	-

102	DN MAIN	UM	-
102	DN MAIN	DM	-
102	UP MAIN	UM	-
102	UP MAIN	DM	-

108	DN MAIN	UM	-
108	DN MAIN	DM	-
108	UP MAIN	UM	-
108	UP MAIN	DM	-

116	DN MAIN	LHJR	WISDOM	SR	-
116	UP MAIN	RHJR	WISDOM	AR	-

\*2 REPORT ANY DAMAGE OR FAILURE OF THE LEVEL CROSSING LIGHTS PHONE 49629738 49629249

\*3 WARNING TRAINS MAY OPERATE OVER BOTH RAIL LINES IN EITHER DIRECTION

23	UPDATE TO LATEST SPEED RAMP INFORMATION	JOHN POSEY	DEREK WOOD
10	ADD SPEED BOARD INFORMATION	DAVID CUL	DAVID WOODWARD
VERSION	ISSUED	ISSUE	REVISED



BRANXTON (INCL) - WHITTINGHAM (INCL) DRIVER'S DIAGRAM

DR No	ISSUES	VERIFIED	APPROVED
DATE	DATE	DATE	DATE
NAME	NAME	NAME	NAME

DATE	23/02/10	BRANXTON (INCL) - WHITTINGHAM (INCL) DRIVER'S DIAGRAM
SCALE	NOT TO SCALE	

**NOTES:**  
**LEGEND**  
 P SIGNAL CAN DISPLAY PULSATING ASPECT  
 POINTS NO 120 122 ARE POWER OPERATED AND FITTED WITH TWIN NOSE MECHANISMS

This drawing and the information contained therein have been created solely for a particular purpose and client. This is protected by copyright. You may not reproduce any of it in any form without the written permission of that Infrastructure Corporation. If you do, you may have to pay damages to that Infrastructure Corporation or you may be prosecuted.

**cad DO NOT AMEND MANUALLY**