


SIGNAL	ROUTE	DESTINATION	IND
103	(M)A	DOWN MAIN	—
	(S)A	DOWN MAIN	DM
	(M)B	UP MAIN	—
	(S)B	UP MAIN	UM

SIGNAL	ROUTE	DESTINATION	IND
108	(M)A	UP MAIN	—
	(S)A	UP MAIN	UM
	(M)B	DOWN MAIN	—
	(S)B	DOWN MAIN	DM

SIGNAL	ROUTE	DESTINATION	IND
108	—	SEING	←
	(M)B	DOWN MAIN	—
	(S)B	DOWN MAIN	DM

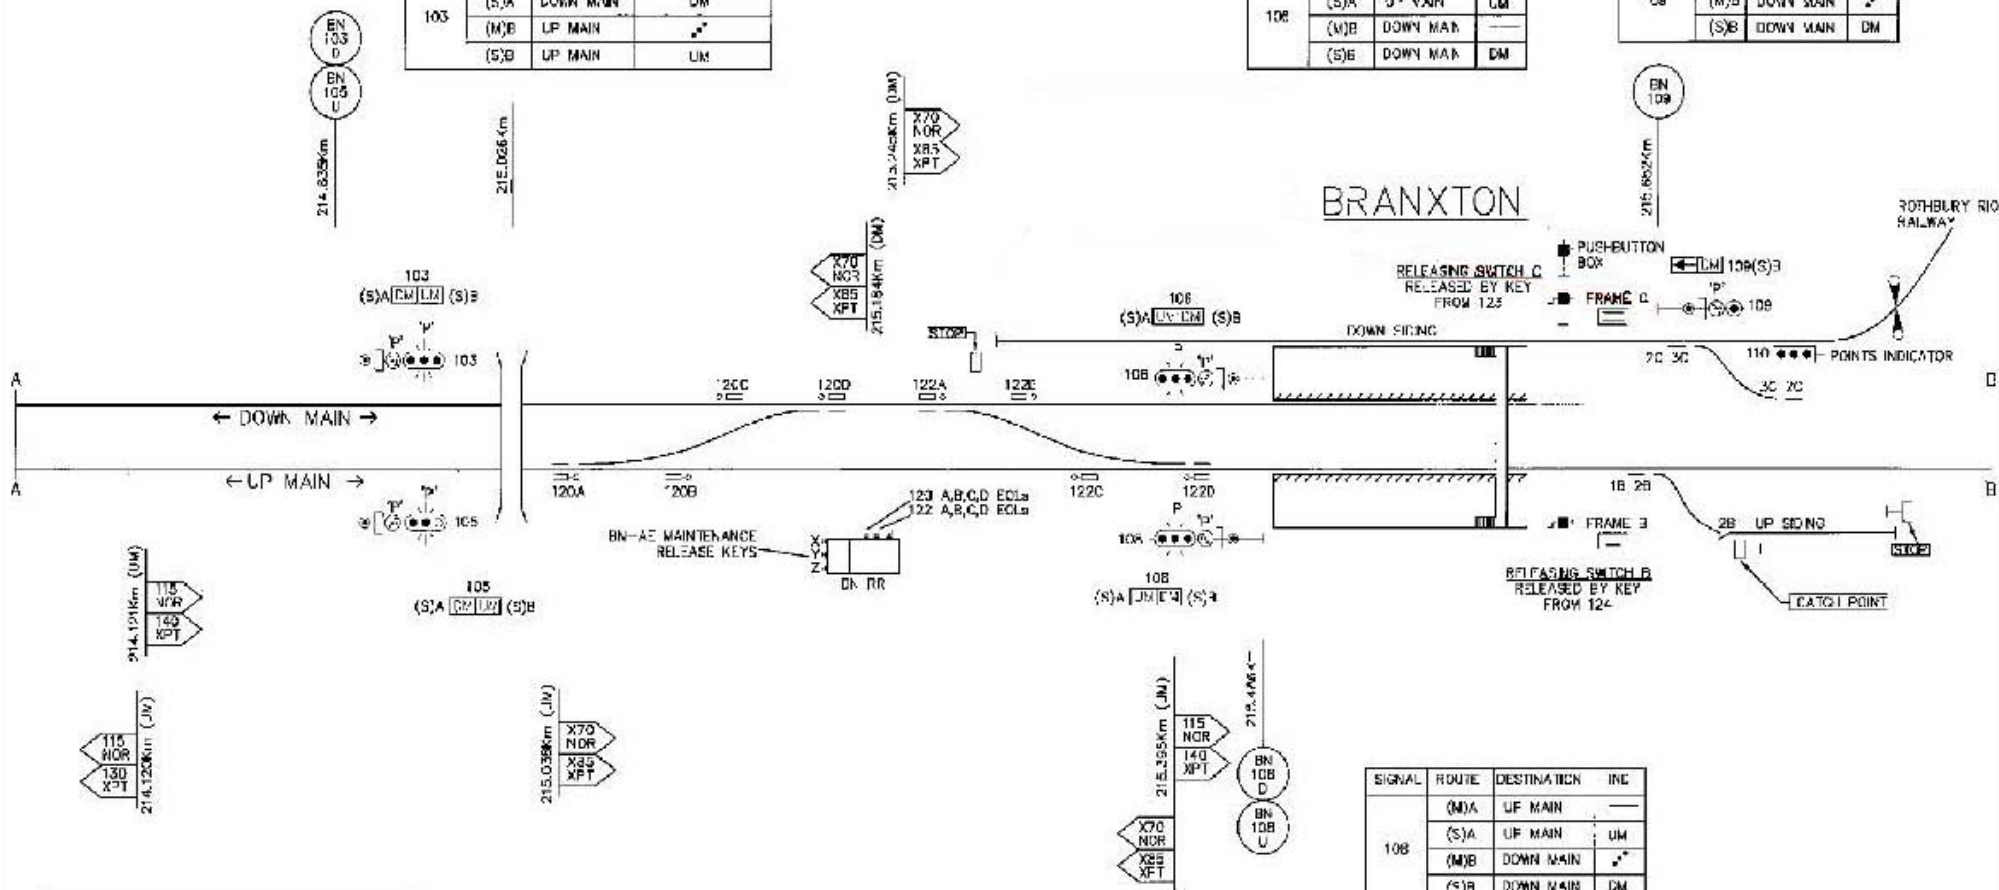

SIGNAL	ROUTE	DESTINATION	IND
105	(M)A	DOWN MAIN	—
	(S)A	DOWN MAIN	DM
	(M)B	UP MAIN	—
	(S)B	UP MAIN	UM

RELEASING SWITCHES X,Y,Z	
SWITCH	DESCRIPTION
X	BRANXTON-ALL ANDALE NCR. DIRECTION RUNNING KEY X 'BRANXTON RELEASING SWITCH X'
Y	BRANXTON-ALL ANDALE NCR. DIRECTION RUNNING KEY Y 'BRANXTON RELEASING SWITCH Y'
Z	BRANXTON-ALL ANDALE NCR. DIRECTION RUNNING KEY Z 'BRANXTON RELEASING SWITCH Z'

EMERGENCY OPERATIONS LOCK			
POINT	TYPE	LOCATION	DESCRIPTION
120	WBS DB4M	BRANXTON	'BRANXTON EOL & 120 FTS WTR'
122	WBS DB4M	BRANXTON	'BRANXTON EOL & 122 FTS WTR'

SIGNAL	ROUTE	DESTINATION	IND
108	(M)A	UP MAIN	—
	(S)A	UP MAIN	UM
	(M)B	DOWN MAIN	—
	(S)B	DOWN MAIN	DM