RAILCORP

# VILLAWOOD SOUTH REFUGE LOOP

## COMMISSIONING SIGNALLING ARRANGEMENTS

Produced by Invensys Rail Ver. 06032012

| SIGNAL | ROUTE | DESTINATION | IND'N |
|---|---|---|---|
| SP91 | (M)B | DOWN MAIN | — |
| | (S)B | DOWN MAIN | DM |

91
[ ] [DM] (S)B

| SIGNAL | ROUTE | DESTINATION | IND'N |
|---|---|---|---|
| SP94 | (M)B | REFUGE LOOP | — |
| | (S)B | REFUGE LOOP | RL |

94
[ ] [RL] (S)B

| SIGNAL | ROUTE | DESTINATION | IND'N |
|---|---|---|---|
| SP100 | (S)A | UP MAIN | UM |
| | (S)B | DOWN MAIN | DM |

100
[UM] (S)A
[DM] (S)B

| SIGNAL | ROUTE | DESTINATION | IND'N |
|---|---|---|---|
| SP107 | (M)A | DOWN MAIN | — |
| | (S)A | DOWN MAIN | DM |

107
(S)A [DM] [ ]

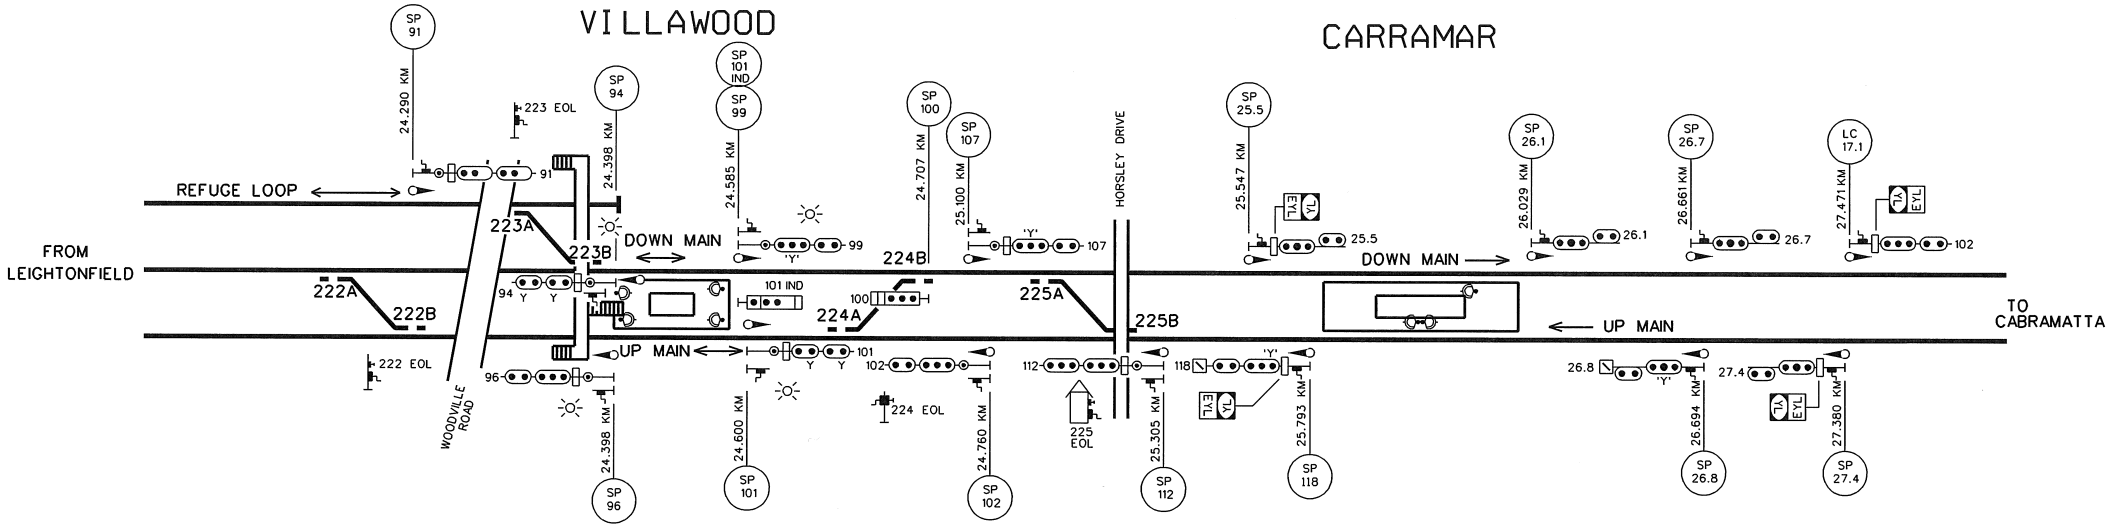


| SIGNAL | ROUTE | DESTINATION | IND'N |
|---|---|---|---|
| SP96 | (M)A | UP MAIN | — |
| | (S)A | UP MAIN | UM |

96
(S)A [UM] [ ]

| SIGNAL | ROUTE | DESTINATION | IND'N |
|---|---|---|---|
| SP101 | (M)A | DOWN MAIN | — |
| | (S)A | DOWN MAIN | DM |

101
(S)A [DM] [ ]
(AND INDICATOR)

| SIGNAL | ROUTE | DESTINATION | IND'N |
|---|---|---|---|
| SP112 | (M)A | UP MAIN | — |
| | (S)A | UP MAIN | UM |
| | (M)B | DOWN MAIN | — |
| | (S)B | DOWN MAIN | DM |

112
(S)A [UM] [DM] (S)B

NOTE:

THE REFUGE LOOP IS NOT WIRED

THE FOLLOWING POINTS ARE POWER OPERATED
222,223,224,225