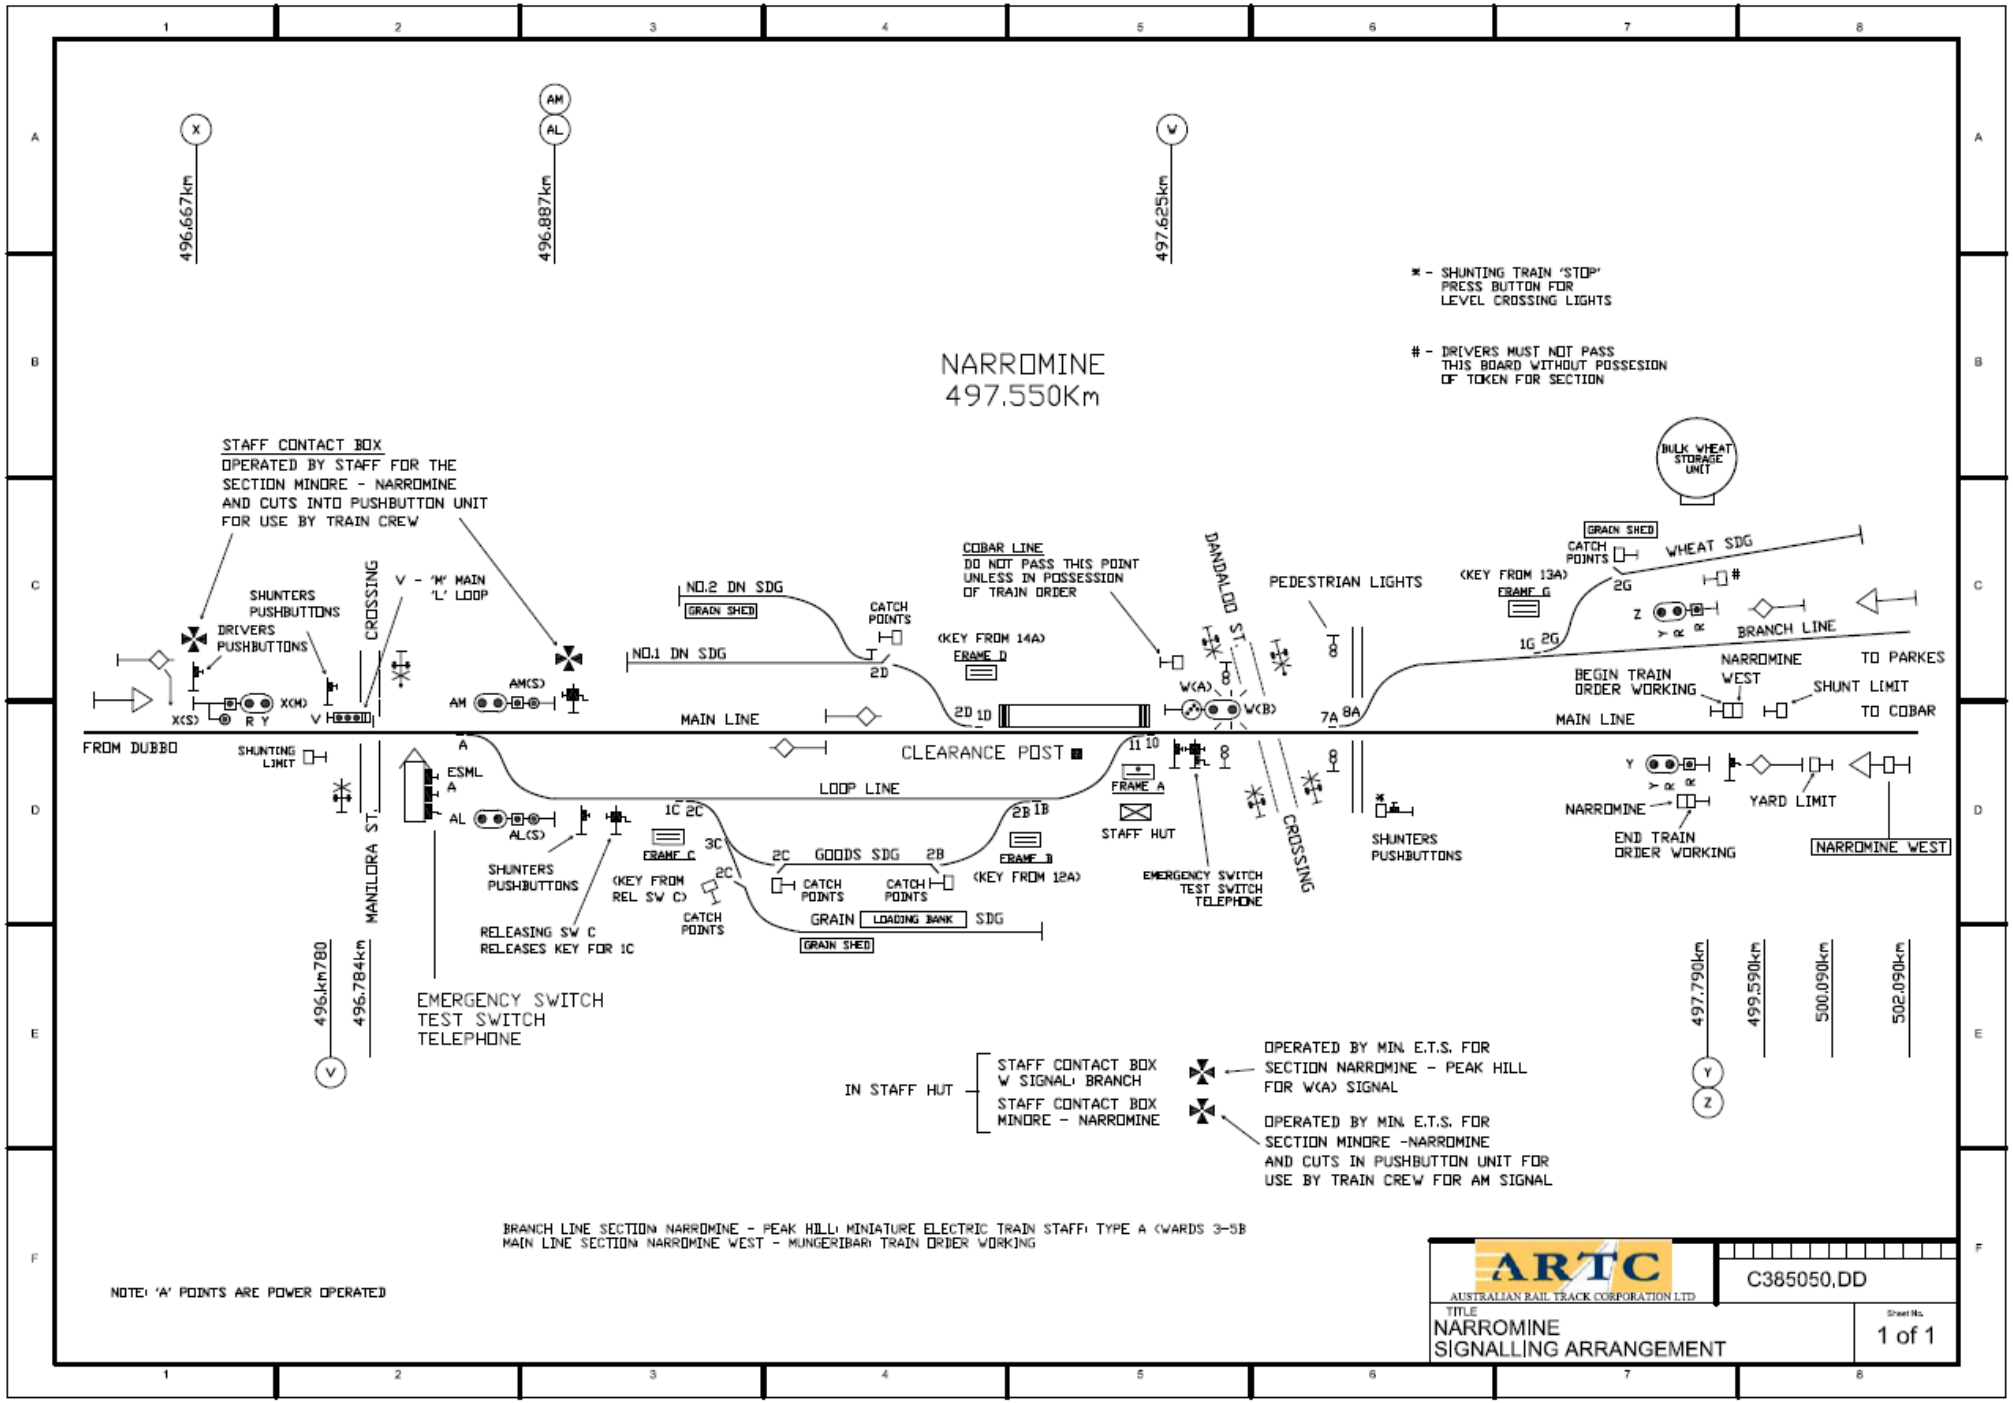
NARROMINE
497.550Km
* - SHUNTING TRAIN 'STOP' PRESS BUTTON FOR LEVEL CROSSING LIGHTS
# - DRIVERS MUST NOT PASS THIS BOARD WITHOUT POSSESION OF TOKEN FOR SECTION
STAFF CONTACT BOX
OPERATED BY STAFF FOR THE SECTION MINORE - NARROMINE AND CUTS INTO PUSHBUTTON UNIT FOR USE BY TRAIN CREW
SHUNTERS PUSHBUTTONS
DRIVERS PUSHBUTTONS
CROSSING
V - 'M' MAIN 'L' LOOP
AM(S)
AM
X(S)
X(M)
R Y
V
NO.2 DN SDG
GRAIN SHED
NO.1 DN SDG
CATCH POINTS
(KEY FROM 14A)
FRAME D
COBAR LINE
DO NOT PASS THIS POINT UNLESS IN POSSESSION OF TRAIN ORDER
DANDALOO ST.
PEDESTRIAN LIGHTS
BULK WHEAT STORAGE UNIT
GRAIN SHED
CATCH POINTS
WHEAT SDG
(KEY FROM 13A)
FRAME G
BRANCH LINE
BEGIN TRAIN ORDER WORKING
NARROMINE WEST
SHUNT LIMIT
TO PARKES
TO COBAR
MAIN LINE
FROM DUBBO
SHUNTING LIMIT
ESML A
CLEARANCE POST
LOOP LINE
W(A)
W(B)
FRAME A
STAFF HUT
EMERGENCY SWITCH TEST SWITCH TELEPHONE
SHUNTERS PUSHBUTTONS
NARROMINE
END TRAIN ORDER WORKING
YARD LIMIT
NARROMINE WEST
MANILORA ST.
AL
AL(S)
SHUNTERS PUSHBUTTONS
(KEY FROM REL SW C)
RELEASING SW C RELEASES KEY FOR 1C
FRAME C
FRAME B
(KEY FROM 12A)
GOODS SDG
CATCH POINTS
GRAIN LOADING BANK SDG
GRAIN SHED
496.km780
496.784km
EMERGENCY SWITCH TEST SWITCH TELEPHONE
497.790km
499.590km
500.090km
502.090km
IN STAFF HUT
STAFF CONTACT BOX W SIGNAL BRANCH
STAFF CONTACT BOX MINORE - NARROMINE
OPERATED BY MIN. E.T.S. FOR SECTION NARROMINE - PEAK HILL FOR W(A) SIGNAL
OPERATED BY MIN. E.T.S. FOR SECTION MINORE -NARROMINE AND CUTS IN PUSHBUTTON UNIT FOR USE BY TRAIN CREW FOR AM SIGNAL
BRANCH LINE SECTION NARROMINE - PEAK HILL: MINIATURE ELECTRIC TRAIN STAFF: TYPE A (WARDS 3-5B
MAIN LINE SECTION NARROMINE WEST - MUNGERIBAR: TRAIN ORDER WORKING
NOTE: 'A' POINTS ARE POWER OPERATED
ARTC
AUSTRALIAN RAIL TRACK CORPORATION LTD
C385050.DD
TITLE
NARROMINE SIGNALLING ARRANGEMENT
Sheet No.
1 of 1