


LOCKSLEY

BREWONGLE

213.1  
DIST  
211.345km

213.1  
1  
213.095km


#1  
DRIVERS WHEN DIRECTED TO PASS THIS SIGNAL  
AT STOP MUST PROCEED WITH CAUTION AND BRING  
THEIR TRAIN TO A STAND WELL CLEAR OF THE  
CROSSOVER AND MUST NOT RESTART UNTIL  
SATISFIED THAT IT IS SAFE TO DO SO

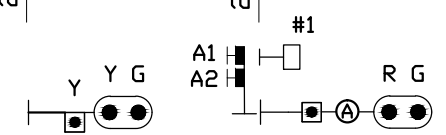

DN MAIN →


FROM SYDNEY

TO ORANGE

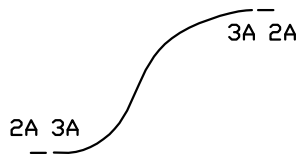


← UP MAIN

RELEASING SWITCH A1  
RELEASED BY LY101 & RELEASES  
KEY (WARDS ARTC1) FOR 1A  
  
RELEASING SWITCH A2  
RELEASED BY LY102 & RELEASES  
KEY (WARDS ARTC2) FOR 5A

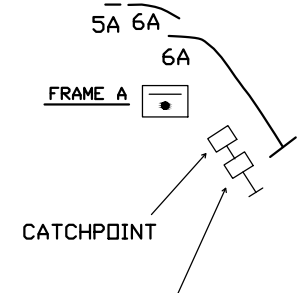


VEHICLES MUST PROCEED  
WITH CAUTION TO NEXT SIGNAL



#1  
214.403km

214  
4



216.674km

214.4  
DIST

FRAME A  
6 LEVERS TYPE 'G'  
1. RELEASED BY KEY (WARDS ARTC1) FROM RELEASING SWITCH  
A1 OUT WITH LEVER NORMAL  
5. RELEASED BY KEY (WARDS ARTC2) FROM RELEASING SWITCH  
A2 OUT WITH LEVER NORMAL

SECTION: TARANA-RAGLAN- AUTOMATIC

 AUSTRALIAN RAIL TRACK CORPORATION LTD	LOCKSLEY.DD	
	TITLE TARANA - RAGLAN SIGNALLING ARRANGEMENT	Sheet No. 1 of 1