


LEVER LIST

- | | |
|---|--|
| 3: DOWN ACCEPT, MAIN | 32. ELEC. RELEASE FOR F |
| 4. DOWN HOME, MAIN | 33. ELEC. RELEASE FOR G |
| 5. DOWN HOME, MAIN TO EAST FORK | 34. UP STARTING MAIN |
| 7. SHUNT, UP MAIN TO EAST FORK | 37. UP 2ND HOME, MAIN |
| 8. SHUNT, UP MAIN TO MAIN | 38. UP HOME, MAIN |
| 10. DOWN STARTING MAIN * | 40. UP CALL-ON, EAST FORK TO UP MAIN |
| 16. ELEC. RELEASE FOR J | 41. SHUNT-AHEAD, UP MAIN |
| 18. POINTS, UP MAIN-DOWN MAIN | 42. UP 2ND HOME, EAST FORK TO MAIN |
| 19. POINTS, MAIN-EAST FORK | 46. UP CALL-ON MAIN |
| 20. FACING POINT LOCK FOR 18 & 19 POINTS (EAST) | 50. POINTS, EAST FORK-WEST FORK |
| 21. FACING POINT LOCK FOR 19 POINTS (WEST) | 51. DOWN HOME & STARTING EAST FORK TO BRANCH |
| 30. UP ACCEPT, MAIN * | 52. DOWN HOME & STARTING WEST FORK TO BRANCH |
| 31. UP CALL-ON MAIN TO UP MAIN | 54. UP HOME, BRANCH TO EAST FORK |
| | 56. UP HOME, BRANCH TO WEST FORK * |

* CONTROLLED BY ORANGE
 # ACCEPTED BY ORANGE

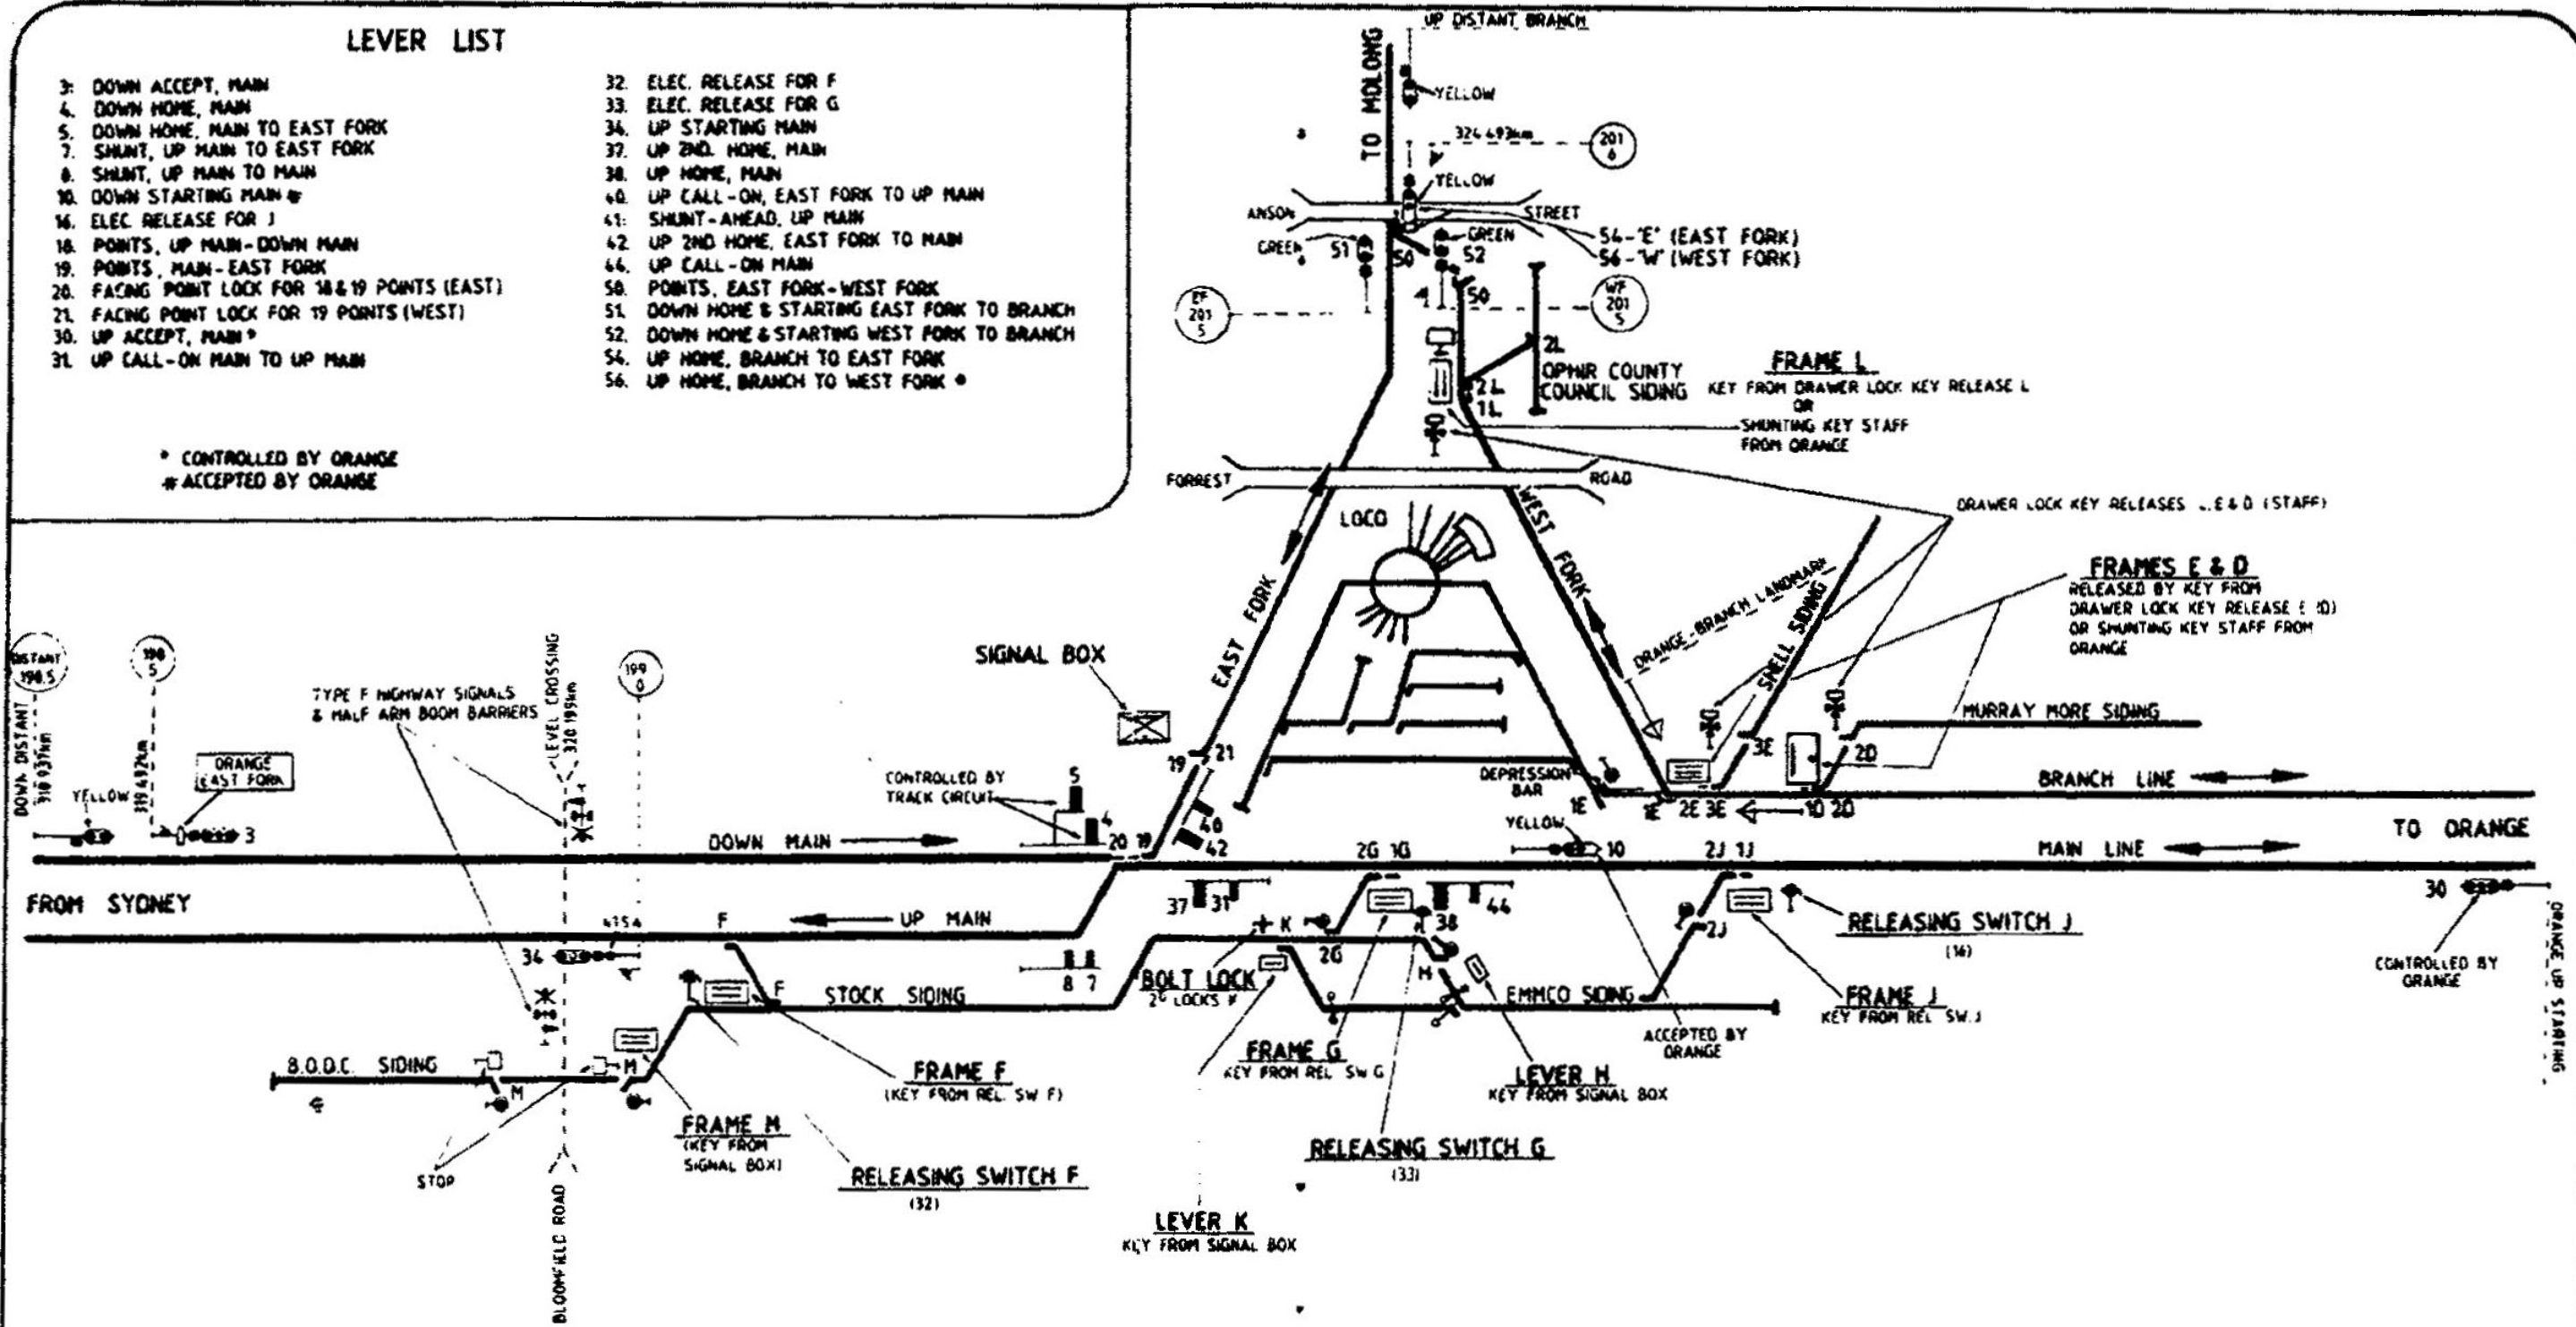

NOTE: No. 50 POINTS ARE MOTOR WORKED.

STATE RAIL AUTHORITY OF NEW SOUTH WALES
 FREIGHT RAIL - WEST

ORANGE EAST FORK

COMPLETE ARRANGEMENT

(92196) SIGNAL DESIGN OFFICE, SYDNEY W.N. 45-1992